



Scanner Insulating Jacket

P/N 97-1047, 97-1048

P/N 97-1051, 97-1058

P/N 97-1067, 97-1069

Vortex-tube Cooler Kit

P/N 60-2720

APPLICATION


In high ambient temperature applications, cooling air applied to the scanner's 3/8" port may be unable to maintain the scanner's temperature below published limits. An effective solution may be to install the scanner in an insulating jacket, and air purge the space between the jacket and the scanner.

Vortex-Tube Cooler Kit, P/N 60-2720, is used to generate and flow chilled air between the jacket and scanner. The actual cooling effect will be dependent upon the pressure and temperature of the compressed air supplied to the vortex-tube.

INSULATING JACKETS

The flexible quilted jacket wraps around the scanner and is secured with hoop & loop seam fasteners. Holes are provided for scanner cable entry, 1" sight-pipe entry, and vortex-tube cooling air entry. A flap on the rear of the jacket allows access to view the back of the scanners where required.

FIGURE 1. 97-1047 (SHOWN WITH 45FS1 FLAME SCANNER)

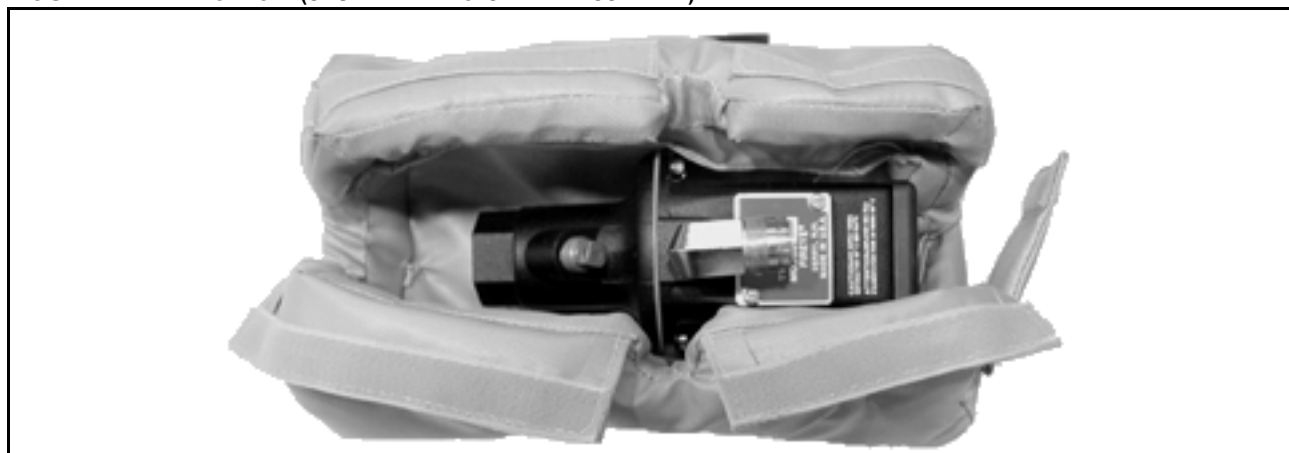



INSULATING JACKET MATERIAL SPECIFICATION

External Covering: SIL #1700
Silicone rubber-impregnated fiberglass fabric
Oil and chemical resistant
Flame resistant
Temperature resistance: -65°F (-54°C), +500°F(+260°C)

Internal Insulation: ACTMAT 1200 Insulation, 1" thick
Textile glass fiber, asbestos free
Non-combustible, non-toxic

INSULATING JACKET APPLICATIONS

PART NUMBER	SCANNER APPLICATION	JACKET DIMENSIONS (Approximate)	SHIPPING WEIGHT
97-1047	Fits all 45UV5, 45RM, 45FS1, 45UVFS1 (except EX and CEX models)	13 1/2" (343mm) long x 6 1/2" (165mm) diameter	2.7 lbs. (1.2kg)
97-1048	Fits all 95IR, 95UV, 95DS InSight (except CEX models)	12" (305mm) long x 6 1/2" (165mm) diameter	2.5 lbs. (1.1kg)
97-1051	Fits all 65UV5, and C9501 through C9707 (except C9506 and C9508)	9" (229mm) long x 7" (178mm) wide and deep	2.8 lbs. (1.3kg)
97-1058	Fits CEX models of 45, 85, and 95-Series scanners	15" (381mm) long x 7 1/2" (191mm) diameter	3.2 lbs. (1.5kg)
97-1067	Fits all 85UV and 85IR Phoenix	13" (330mm) long x 6 1/2" (165mm) diameter	2.2 lbs. (1.0kg)
97-1069	Fits 48PT2-CEX and UV1A-1-CEX	8 3/4" (222mm) long x 5 1/2" (140mm) diameter	

VORTEX-TUBE COOLER KIT, P/N 60-2720

The stainless steel vortex-tube contains no moving parts and operates on ordinary compressed air. It is secured to an opening on the side of the insulating blanket with hardware provided in the kit.

Compressed air is supplied to the 1/4" NPT male fitting on the side of the tube. The tube separates the air into two streams. The "cool" air stream is blown into the space between the insulating jacket and the scanner, thereby lowering the scanner's internal temperature. The "warm" air stream is exhausted at the bottom of the tube.

The vortex-tube lowers the temperature of the compressed air supplied to the tube as shown in the table below. The resulting decrease in scanner internal temperature will be slightly less than the drop in compressed air temperature.

Nominal temperature drop of compressed air supply at various supply pressures:

AIR SUPPLY PRESSURE, PSIG	20	40	60	80	100	120
AIR TEMPERATURE DROP °F (°C)	28 (16)	38 (21)	46 (26)	50 (28)	54 (30)	55 (31)

Compressed Air Supply Requirements:


Pressure: 80-110 PSIG optimum, (20 PSIG min.)
Volume: 10 SCFM (at 100 PSIG)
Filtration: Clean, dry, filtered to 25 microns or less

Dimensions:

Length: 7 1/2" (191mm), installed

Shipping weight: 0.9 lbs. (0.4 kg)

VORTEX TUBE, KIT ASSEMBLY

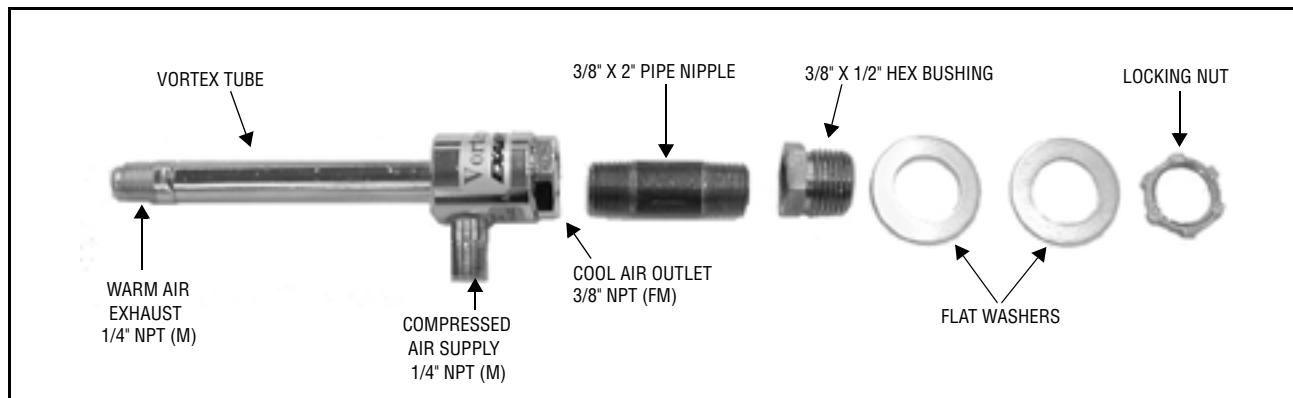

1. Attach the 3/8" NPT pipe nipple to the vortex-tube cool air outlet.
2. Attach the 3/8" x 1/2" hex bushing to the pipe nipple.
3. Install one flat washer on the hex bushing.
4. Insert the hex bushing into the through-hole on the bottom of the insulating jacket.
5. Secure the vortex-tube assembly to the insulating jacket with the second flat washer and locking nut.
6. Wrap the insulating jacket around the installed flame scanner and secure with the with the hook-and-loop seam fastener.

Note: The insulating jacket does not allow easy access to the scanner housing cooling air tap. It is recommended that this cooling air tap be plugged, and cooling/purge air be connected to the scanner sight pipe at a 1" tee or wye located between the scanner and the burner.

7. Connect the compressed air supply to the 1/4" NPT male fitting on the side of the vortex-tube.

Note: Support the compressed air supply line to avoid stress on the insulating jacket.



NOTICE

When Fireeye products are combined with equipment manufactured by others and/or integrated into systems designed or manufactured by others, the Fireeye warranty, as stated in its General Terms and Conditions of Sale, pertains only to the Fireeye products and not to any other equipment or to the combined system or its overall performance.

WARRANTIES

FIREYE guarantees for *one year from the date of installation or 18 months from date of manufacture* of its products to replace, or, at its option, to repair any product or part thereof (except lamps, electronic tubes and photocells) which is found defective in material or workmanship or which otherwise fails to conform to the description of the product on the face of its sales order. **THE FOREGOING IS IN LIEU OF ALL OTHER WARRANTIES AND FIREYE MAKES NO WARRANTY OF MERCHANTABILITY OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.** Except as specifically stated in these general terms and conditions of sale, remedies with respect to any product or part number manufactured or sold by Fireeye shall be limited exclusively to the right to replacement or repair as above provided. In no event shall Fireeye be liable for consequential or special damages of any nature that may arise in connection with such product or part.



FIREYE®
3 Manchester Road
Derry, New Hampshire 03038 USA
www.fireeye.com

CU-103
APRIL 5, 2013
Supersedes August 12, 2005
